


## Remote Control

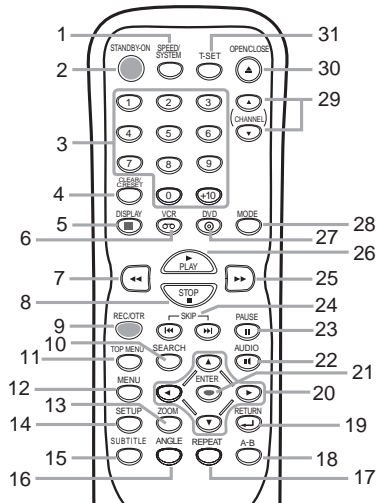


- 1. SPEED/SYSTEM (VCR)**  
To change the recording speed.  
To change the VCR system for matching recorded system (AUTO, PAL or MESECAM).
- 2. STANDBY-ON**  
To turn the unit ON or OFF.
- 3. 0-9 Number buttons**  
To select numbered items on the menu screen. (DVD)  
To select chapters, titles or tracks directly. (DVD)  
To select a channel. (VCR)  
**+10 (DVD)**  
To enter 10 and over.
- 4. CLEAR (DVD)**  
To clear the markers.  
To clear the incorrect input.  
To cancel the point for A-B repeat on a DVD and a CD.  
**C.RESET (VCR)**  
To reset the tape counter.
- 5. DISPLAY**  
To display the current playback mode. (DVD)  
To display the current time, tape counter and channel number. (VCR)
- 6. VCR**  
Press this button before using the remote control for VCR features.
- 7. ◀◀**  
To search backward through the disc. (DVD)  
To rewind the tape. (VCR)
- 8. STOP ■**  
To stop playback. (DVD)  
To stop playback or recording. (VCR)
- 9. REC/OTR (VCR)**  
Press once to start recording or repeatedly to start One-Touch Recording.
- 10. SEARCH**  
To search chapters, titles, tracks, markers or time. (DVD)  
To call up the index or time search menu. (VCR)

## Loading Batteries

- 1) Open the battery compartment cover.
- 2) Insert two R6 (AA) batteries, with each one oriented correctly.
- 3) Close the cover.

**Note:** • Do not mix alkaline and manganese batteries.  
• Do not mix old and new batteries.

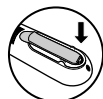

- 11. TOP MENU (DVD)**  
To call up the title menu on a DVD.  
To return to the top file of the highest hierarchy in the PROGRAM and the FILE LIST.
- 12. MENU (DVD)**  
To call up the menu on a DVD.  
To call up the FILE LIST.
- 13. ZOOM (DVD)**  
To magnify the part of picture.
- 14. SETUP**  
To access or remove the DVD setup menu. (DVD)  
To call up the VCR menu. (VCR)
- 15. SUBTITLE (DVD)**  
To change subtitles on a DVD.
- 16. ANGLE (DVD)**  
To change camera angles on a DVD.  
To rotate a picture of JPEG files.
- 17. REPEAT (DVD)**  
To play the selected chapter, title, track, group or a whole disc repeatedly.
- 18. A-B (DVD)**  
To repeat between your chosen point A and B.
- 19. RETURN (DVD)**  
To return to the previous operation in the menu.
- 20. Cursor ▲ / ▼ / ◀ / ▶**  
To move the cursor.
- 21. ENTER (DVD)**  
To confirm your menu selections.
- 22. AUDIO (DVD)**  
To change audio languages on a DVD or disc with DivX® files.  
To change sound modes of a CD.
- 23. PAUSE II**  
To pause playback. (DVD)  
To advance playback one frame at a time. (DVD)  
To pause playback or recording. (VCR)  
To advance playback one frame at a time. (VCR)  
To view the tape in slow motion with ▶▶. (VCR)
- 24. SKIP ◀◀ ▶▶ (DVD)**  
To skip chapters or tracks.
- 25. ▶▶**  
To search forward through the disc. (DVD)  
To fast forward the tape. (VCR)
- 26. PLAY ▶**  
To begin playback.
- 27. DVD**  
Press this button before using the remote control for DVD features.
- 28. MODE (DVD)**  
To set up Programmed or Random Playback for Audio CDs, MP3 and JPEG files.  
To set the Virtual Surround ON or OFF.  
To activate the Virtual Surround or x1.3 and x0.8 Rapid Play with Voice.
- 29. CHANNEL ▲ / ▼ (VCR)**  
To change TV channels.  
To adjust the tracking manually during playback.
- 30. OPEN/CLOSE**  
To open or close the disc tray. (DVD)  
To eject the tape from the VCR. (VCR)
- 31. T-SET (VCR)**  
To put the VCR into Standby mode for a Timer Recording.

**Note:** • If you turn off this unit, **OPEN/CLOSE** on the remote control is not available.  
Be sure to use **OPEN/CLOSE** or **STOP/EJECT** on the unit.

## DVD/VCR Switching

Since this product comprises DVD player and VCR, it is necessary to select the correct output mode.

### SWITCHING TO DVD MODE

Press **DVD** on the remote control or **OUTPUT** on the front panel. (Make sure that the DVD OUTPUT indicator is lit.)

### SWITCHING TO VCR MODE

Press **VCR** on the remote control or **OUTPUT** on the front panel. (Make sure that the VCR OUTPUT indicator is lit.)